



#C1210 Installation Instructions 2007-2018 Chevy/GM 1500 2/4wd 2" Lift Kit

Read and understand all instructions and warnings prior to installation of product and operation of vehicle.

Zone Offroad Products recommends this system be installed by a professional technician. In addition to these instructions, professional knowledge of disassembly/ reassembly procedures and post installation checks must be known. Minimum tool requirements include the following: Assorted metric and standard wrenches, hammer, hydraulic floor jack and a set of jack stands. See the "Special Tools Required" section for additional tools needed to complete this installation properly and safely.

» PRODUCT SAFETY WARNING

Certain Zone Suspension Products are intended to improve off-road performance. Modifying your vehicle for off-road use may result in the vehicle handling differently than a factory equipped vehicle. Extreme care must be used to prevent loss of control or vehicle rollover. Failure to drive your modified vehicle safely may result in serious injury or death. Zone Offroad Products does not recommend the combined use of suspension lifts, body lifts, or other lifting devices.

You should never operate your modified vehicle under the influence of alcohol or drugs. Always drive your modified vehicle at reduced speeds to ensure your ability to control your vehicle under all driving conditions. Always wear your seat belt.

» TECHNICAL SUPPORT

Live Chat provides instant communication with Zone tech support. Anyone can access live chat through a link on www.zoneoffroad.com.

www.zoneoffroad.com may have additional information about this product including the latest instructions, videos, photos, etc.

Send an e-mail to tech@zoneoffroad.com detailing your issue for a quick response.

888.998.ZONE Call to speak directly with Zone tech support.

» PRE-INSTALLATION NOTES

1. Special literature required: OE Service Manual for model/year of vehicle. Refer to manual for proper disassembly/reassembly procedures of OE and related components.
2. Adhere to recommendations when replacement fasteners, retainers and keepers are called out in the OE manual.
3. Larger rim and tire combinations may increase leverage on suspension, steering, and related components. When selecting combinations larger than OE, consider the additional stress you could be inducing on the OE and related components.
4. Post suspension system vehicles may experience drive line vibrations. Angles may require tuning, slider on shaft may require replacement, shafts may need to be lengthened or trued, and U-joints may need to be replaced.
5. Secure and properly block vehicle prior to installation of Zone Offroad Products. Always wear safety glasses when using power tools.
6. If installation is to be performed without a hoist, Zone Offroad Products recommends rear alterations first.
7. Due to payload options and initial ride height variances, the amount of lift is a base figure. Final ride height dimensions may vary in accordance to original vehicle attitude. Always measure the attitude prior to beginning installation.

Difficulty Level

easy 1 **2** 3 4 5 difficult

Estimated installation: 1-2 hours

Special Tools Required

None

Tire/Wheel Fitment

Tire:

285/70R17

285/65R18

285/55R20

Wheel:

Stock (or equivalent backspacing)

IMPORTANT

It is required that ride height measurements be taken before and after installation. Measure from the **WHEEL AXLE CENTER** up to the **FENDER LIP** of the wheel opening. Do this for all 4 wheels. Record measurements below.**

BEFORE:

LF _____ *RF* _____ *LR* _____ *RR* _____

AFTER:

LF _____ *RF* _____ *LR* _____ *RR* _____



***These ride heights will be required if you have any ride height concerns after installation. Please be prepared to provide these to Technical Support.*

Kit Contents

Qty	Part	2	2" Rear Blocks
2	Strut Mount Spacer	4	9/16" x 2-9/16" x 11-3/8" U-Bolts
1	Bolt Pack		

INSTALLATION INSTRUCTIONS

1. Pack the vehicle on a clean, flat surface and block the rear wheels for safety.
2. Raise the front of the vehicle and support the frame rails with jack stands.
3. Remove the front wheels.
4. Disconnect the front driver's and passenger's side sway bar links from the sway bar. Save hardware. **Figure 1**

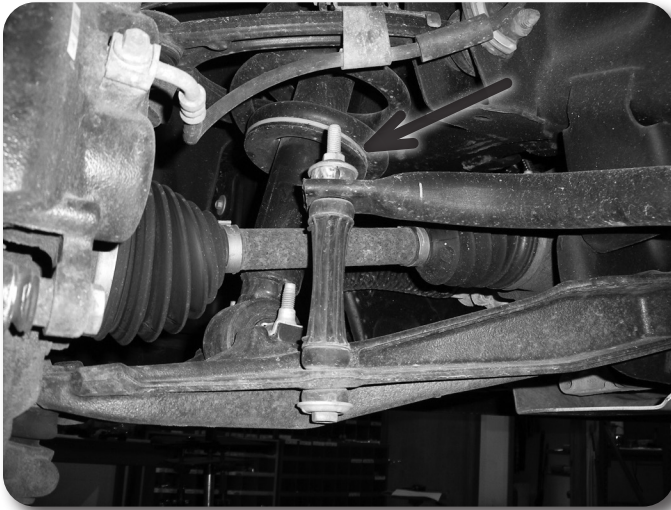


Figure 1

Perform the following installation steps on one side at a time.

5. Loosen but do not remove the three upper strut mount nuts at the frame. **Figure 2**
Do not loose the center strut rod nut.



Figure 2

6. Remove the nut from the steering tie rod end. **Figure 3** Thread the nut back on a couple of turns by hand. Strike the knuckle near the tie rod end to dislodge the rod end taper from the knuckle. Remove the nut and the tie rod end from the knuckle. Save nut.

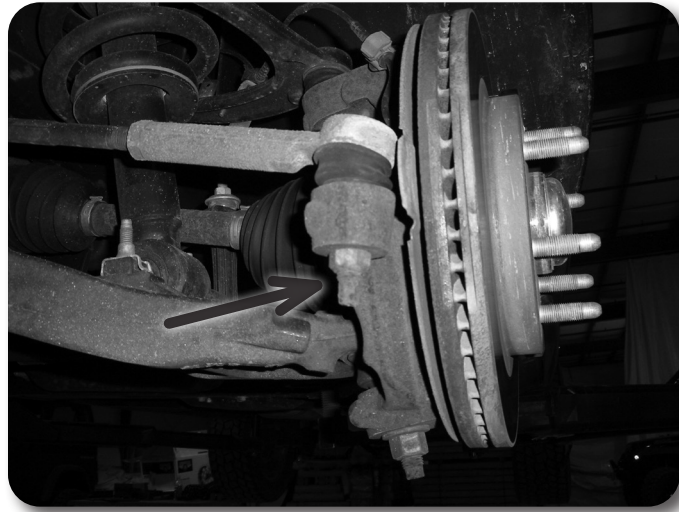


Figure 3

7. Remove the nut from the upper ball joint. **Figure 4** Thread the nut back on a couple of turns by hand. Strike the knuckle near the upper ball joint to dislodge the rod end taper from the knuckle. Remove the nut and allow the knuckle to swing rearward out of the way. Save the ball joint nut.



Figure 4

8. Support the lower control arm with a jack. Remove the two lower strut bar pin bolts. **Figure 5** The bolts will not be reused. Lower the control arm with the jack so there is about 1" of room between the strut bar pin and the lower control arm.



Figure 5

9. Using a flat head screw driver, remove the factory nut clips from the strut bar pins. **Figure 6** These will not be reused.

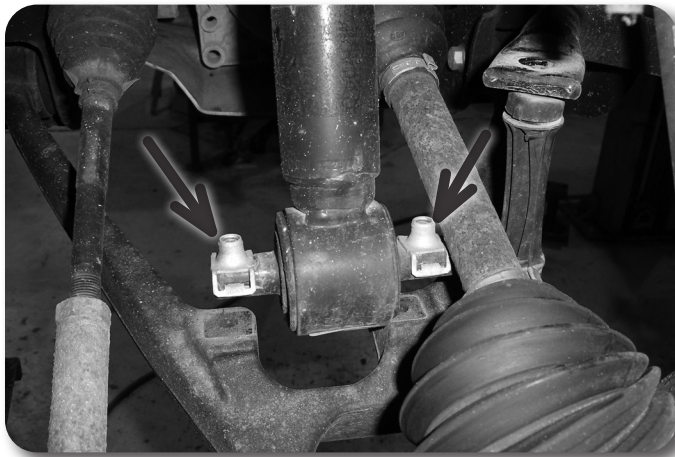


Figure 6

10. Locate one of the new provided strut mount spacers. Position the spacer between the strut bar pin and the control arm. The small tabs on the spacer will point up and be positioned on the outside of the strut bar pin. The "U" shaped portion of the spacer will wrap down around the backside of the control arm mount.
11. Align the holes in the strut bar pin and the spacer. Install the provided 7/16" x 3-1/2" bolts with washers down through the bar pin and spacer. **Figure 7** Once the bolts are in position, align them with the holes in the control arm and raise the control arm up to seat the assembly together. Fasten the 7/16" bolts with the provided nuts and washers. Torque the 7/16" hardware to 45 ft-lbs.
12. With the lower hardware tight. Torque the factory upper strut mount nuts to 40 ft-lbs.
13. Reattach the upper ball joint to the knuckle. Use the jack to support the lower control arm and torque the upper ball joint nut to 40 ft-lbs.
14. Reattach the steering to the knuckle and torque the factory nut to 44 ft-lbs.
15. Repeat installation on the opposite side of the vehicle. When both sides are complete, reattach the sway bar links and tighten hardware until the bushings begin to swell.

Step 11 Note
The bolts must run from the top down. All hardware is located in pack #646.

Recommend Alignment Specifications

CASTER
 $3.30^{\circ} \pm 1.00^{\circ}$

CAMBER
 $-0.10^{\circ} \pm 0.60^{\circ}$

TOE
 $+0.10^{\circ} \pm 0.20^{\circ}$

Step 3 Caution:

To avoid axle shift, only remove/replace the u-bolts from one side at a time.

Step 4 Caution:

It may be necessary to adjust the brake line in order to gain additional length. Do not kink the brake line in any way.

Step 6 Caution:

Do not bring this assembly under pressure until the u-bolts have been installed.

Step 7 Caution:

Be sure to install the u-bolts under the brake line.

Post-Installation Warnings

1. Check all fasteners for proper torque. Check to ensure for adequate clearance between all rotating, mobile, fixed, and heated members. Verify clearance between exhaust and brake lines, fuel lines, fuel tank, floor boards and wiring harness. Check steering gear for clearance. Test and inspect brake system.
2. Perform steering sweep to ensure front brake hoses have adequate slack and do not contact any rotating, mobile or heated members. Inspect rear brake hoses at full extension for adequate slack. Failure to perform hose check/ replacement may result in component failure.
3. Perform head light check and adjustment.
4. Re-torque all fasteners after 500 miles. Always inspect fasteners and components during routine servicing.



Figure 7

16. Reinstall the wheels and lower the vehicle to the ground. Torque lug nuts to 140 ft-lbs in a crossing pattern.
17. Check all hardware for proper torque.
18. Check hardware after 500 miles.
19. Adjust headlights.
20. The vehicle will need a complete front end alignment.

Rear Installation Instructions

NOTE: Complete the following instructions one side at a time. Do not attempt to drop the entire axle at one time.

1. Raise rear of vehicle and support with jack stands under frame. Remove wheels.
2. With axle firmly supported by jack stands remove the OEM shock. Place a hydraulic jack under the rear differential.
3. Loosen the OEM u-bolts that retain the spring to the axle.
4. With the hydraulic jack supporting the axle, slowly allow the axle to drop away from the leaf spring. Replace the jack stands for additional support.
5. Place the new block between the stock block and the leaf pack.
6. Slowly raise the axle with the hydraulic jack in order to assemble the blocks and leaf springs. Make sure that all of the locating pins are inside their female counterparts.
7. Install u-bolts with the supplied fasteners. Be sure the u-bolts are perpendicular to the axle before tightening.
8. Tighten the u-bolts to 100-120 ft-lbs. Replace wheels. Install correct Zone shocks recommended for this amount of lift. Replace the wheel.
9. Complete the above instructions for the other side of the vehicle.